




MATERIALS

| | |
|---------------------|------------------------------------|
| BODY | STAINLESS STEEL GOLD PLATED |
| COUPLING NUT | BRASS NICKEL PLATED |
| | |
| | |

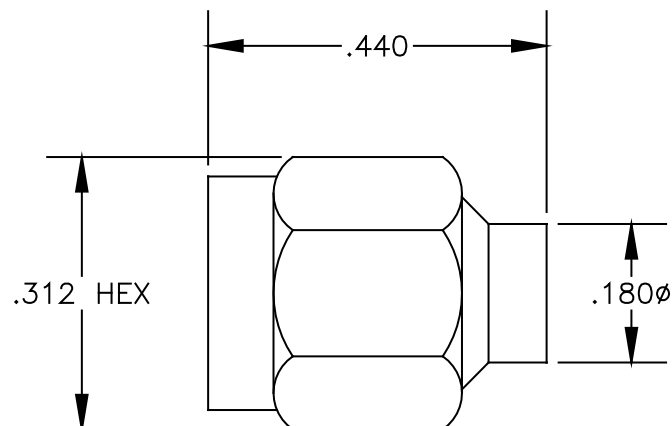

ASSEMBLY PROCEDURES

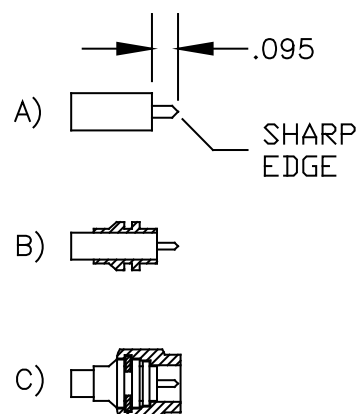

1. STRIP CABLE AS SHOWN IN (A). DO NOT NICK CENTER CONDUCTOR.
2. INSERT CABLE INTO BODY (2) UNTIL OUTER CONDUCTOR FLUSH WITH BODY AS SHOWN IN (B). SOLDER OUTER CONDUCTOR TO BODY.
3. ASSEMBLE GASKET (3), RETAINING RING (1) AND COUPLING NUT (4). AS SHOWN IN (C).



PASTERNAK ENTERPRISES, LLC

P.O BOX 16759, IRVINE, CA 92623
PHONE (949) 261-1920 FAX (949) 261-7451

WEB ADDRESS: www.pasternack.com
E-MAIL ADDRESS: sales@pasternack.com

ESTABLISHED 1972

COAXIAL & FIBER OPTICS

DWG TITLE

PE4007

DES.

**SMA MALE, SOLDER ATTACHMENT FOR
RG402, PE-SR402AL & PE-SR402FL
WITHOUT-CONTACT**

SIZE A

FSCM NO. 53919

CAD FILE

032202

SCALE N/A

147

NOTES:

1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL.
2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.