DATA SHEET



MINIATURE SIGNAL RELAY UA2/UB2 SERIES

Super-compact size, Slim-package, Surface-mounting type available

DESCRIPTION


NEC TOKIN's UA2/UB2 relay ia a new generation miniature signal relay of super-compact size and slim-pakage.

FEATURES

- O Small mounting size of slim package for dense mounting.
- O Telcordia (2500 V) and FCC (1500 V) surge capability.
- IEC60950/UL1950/EN60950 spacing and high breakdown voltage.
 (Basic insulation class on 200 V working voltage)
- O Low power consumption 140 mW

APPLICATIONS

Electronic switching systems, PBX, terminal equipment, telephone system.

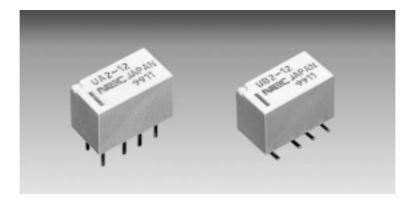

For Correct Use of Miniature Relays

DO NOT EXCEED MAXIMUM RATINGS.

Do not use relays under exceeding conditions such as over ambient temperature, over voltage and over current. Incorrect use could result in abnormal heating, damage to related parts or cause burning.


READ CAUTIONS IN THE SELECTION GUIDE.

Read the cautions described in NEC/TOKIN's "Miniature Relays" when you choose relays for your application.

The information in this document is subject to change without notice.


DIMENSIONS AND PAD LAYOUTS (Unit : mm [inch]) **UA2 SERIES**

STANDARD

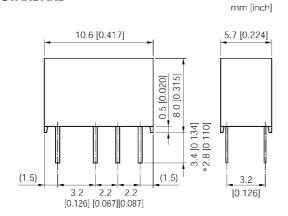

Tolerance of lead pitch is ± 0.15 mm [0.006 inch] Another tolerance is ± 0.3 mm [0.012 inch] () is reference.

* Value of trimmed lead type (NJ type)

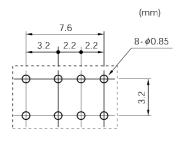


(Bottom view)


Note. General tolerance: ±0.1

UB2 SERIES

STANDARD

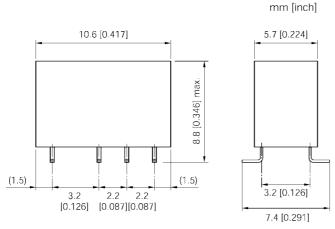


Tolerance of lead pitch is ± 0.15 mm [0.006 inch] Another tolerance is ± 0.3 mm [0.012 inch] () is reference.

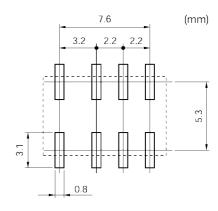


(Bottom view)

Note. General tolerance: ±0.1

MINIMUM FOOTPRINT TYPE

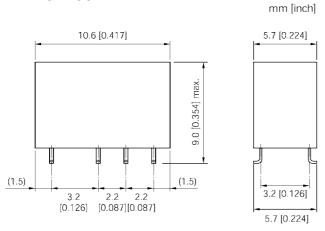

Tolerance of lead pitch is ± 0.15 mm [0.006 inch] Another tolerance is ± 0.3 mm [0.012 inch] () is reference.

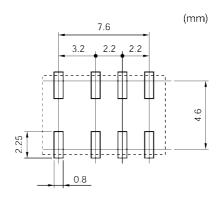


(Bottom view)

Note. General tolerance: ±0.1



PIN CONFIGURATIONS (bottom view) **UA2 SERIES**




Non-latch type (not energized position)

(not energized position)

Single coil latch type (reset position)

> S : Coil polarity of set (operate) R: Coil polarity of reset (release)


UB2 SERIES



Single coil latch type (reset position)

S : Coil polarity of set (operate) R: Coil polarity of reset (release)

MARKINGS (top view)

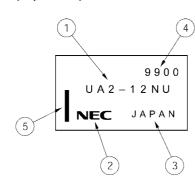

- ① Part number
- 2 Manufacturer
- ③ Country of origin
- 4 Date code
- ⑤ Index mark of relay direction (pin No. 1, 8)



PERFORMANCE CHARACTERISTICS (Community)

Contact Form		2 Form c	2 Form c		
Contact Ratings	Maximum Switching Power	30 W (resistive)	37.5 VA (resistive)		
	Maximum Switching Voltage	220 Vdc	250 Vac		
	Maximum Switching Current	1 A	•		
	Maximum Carrying Current	1 A			
Minimum Contact Ratings		10 mV.dc, 10 μA *4	10 mV.dc, 10 μA *4		
Initial Contact Resistance	Initial Contact Resistance		100 mΩ Max. (Initial)		
Contact Material		Silver alloy with gold a	Silver alloy with gold alloy overlay		
Naminal Operating Dawer	Non-Latch Type	140 to 230 mW	140 to 230 mW		
Nominal Operating Power	Single Coil Latch Type	100 to 120 mW	100 to 120 mW		
Operate Time (Excluding Bounce)		Approximately 2 ms	Approximately 2 ms		
Release Time (Excluding Bounce)		Approximately 1 ms w	Approximately 1 ms without diode		
Insulation Resistance		1000 MΩ at 500 Vdc	1000 MΩ at 500 Vdc		
	Between Open Contacts	1000 Vac for one minute (1500 V surge, 10 × 160 μ s * 1)			
Breakdown Voltage	Between Adjacent Contacts				
	Between Coil and Contact	1500 Vac for one minute (2500 V surge, $2 \times 10 \mu s^{+2}$)			
Shock Resistance		735 m / s ² (misoperat 980 m / s ² (destructive	735 m / s ² (misoperating) 980 m / s ² (destructive failure)		
Vibration Resistance		10 to 55 Hz at double (misoperating)	10 to 55 Hz at double amplitude of 3 mm (misoperating) 10 to 55 Hz, double amplitude of 5 mm		
Ambient Temperature		- 40 to +85°C	- 40 to +85°C		
Coil Temperature Rise		18 degrees at nomina	18 degrees at nominal coil voltage (140 mW)		
	No-load	5 × 10 ⁷ * 3 operations (Non-latch type)			
Bunning apositional			1 × 10 ⁷ operations (Latch type)		
Running specifications	Lood		30 Vdc 1 A (resistive), 1 × 10 ⁵ operations at 20°C		
	Load	125 Vac 0.3 A (resisting	125 Vac 0.3 A (resistive), 1 × 10 ⁵ operations at 20°C		
Weight		Approximately 1 gram	Approximately 1 grams		

^{*1} rise time : 10 μ s, decay time to half crest : 160 μ s

SAFETY STANDARD AND RATING

UL Recognized	CSA Certificated		
(UL508)*	(CSA C22.2 No14)		
File No E73266	File No LR46266		
30 Vdc, 1 A (Resistive)			
110 Vdc, 0.3 A (Resistive)			
125 Vac, 0.3 A (Resistive)			

TUV Certified			
(EN61810)			
No.2050596			
Creepage and clearance of coil to contact is over			
than 2 mm (According EN60950)			
Basic insulation class			

* Spacing : UL840 Spacing : CSAstd950

RECOMMENDED RELAY DRIVE CONDITIONS

Drive under condetions. If it is impossible, please inquire to NEC/TOKIN

Nonlatch type	Voltage : with ±5% at nominal voltage	
	Square pulse (rise and fall time is repidly)	Ambient temperature
Single coil latch type	pulse height : within ±5% at nominal voltage	- 40 to +85°C
	pulse width : more than 10 ms	

^{*2} rise time: 2 μ s, decay time to half crest: 10 μ s


This shows a number of operation where it can be running by which a fatal is not caused, and number of operation by wich a stesdy characteristic is maintained is 1 × 10⁷ operations.

^{*4} This value is a reference value in the resistive load.

Minimum capacity changes depending on seitching frequency and environment temperature and the load.



PART NUMBER SYSTEM

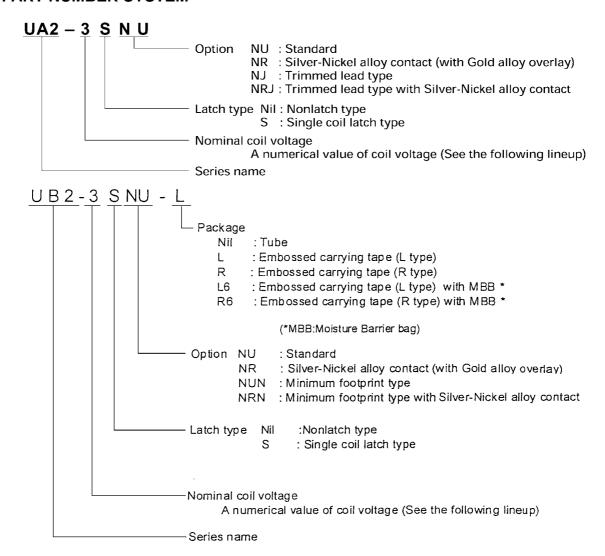

NOMINAL LINEUP

Non-latch Type at 20°C

		1		
Nominal Coil	Coil	Must Operate	Must Release	Nominal
Voltage	Resistance	Voltage	Voltage	operate power
(Vdc)	(Ω) ±10 %	(Vdc)	(Vdc)	(mW)
1.5	16	1.13	0.15	140
3	64.3	2.25	0.3	140
4.5	145	3.38	0.45	140
5	178	3.75	0.5	140
6	257	4.5	0.6	140
9	579	6.75	0.9	140
12	1028	9.0	1.2	140
24	2504	18.0	2.4	230

Single-Coil Latch Type

at 20°C


Nominal Coil	Coil	Must Operate	Must Release	Nominal
Voltage	Resistance	Voltage	Voltage	operate power
(Vdc)	(Ω) ±10 %	(Vdc)	(Vdc)	(mW)
1.5	22.5	1.13	1.13	100
3	90	2.25	2.25	100
4.5	202.5	3.38	3.38	100
5	250	3.75	3.75	100
6	360	4.5	4.5	100
9	810	6.75	6.75	100
12	1440	9.0	9.0	100
24	4800	18.0	18.0	120




PERFORMANCE DATA

COIL TEMPERATURE RISE


Temperature is measured by coil resistance.

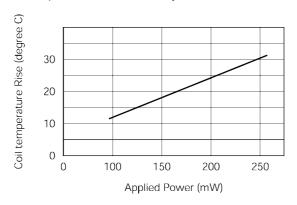

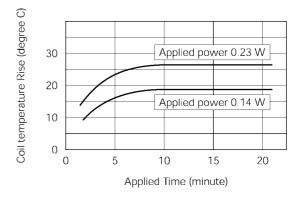


SWITCHING CAPACITY

This is allowed maximum value. Inquiry for NEC/TOKIN under maximum value at

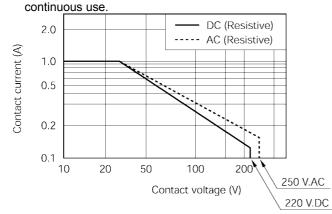



MAXIMUM COIL VOLTAGE

This is a maximum value of permissible alteration. Inquiry for NEC/TOKIN at continuous use..

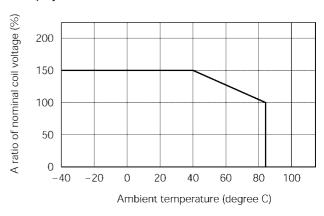

APPLIED VOLTAGE VS. TIMING (Sample: UA2-5NU)

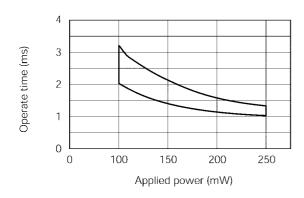


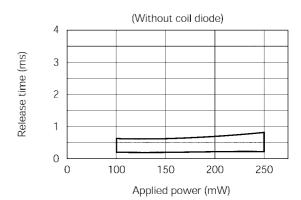




OPERATE AND RELEASE VOLTAGE VS. AMBIENT TEMPERATURE

This shows a typical change of operate (release) voltage. Maximum value of operate estimated, so it must be applied more than this value for safety operation. In case of "hot start operation", please inquiry for NEC/TOKIN.

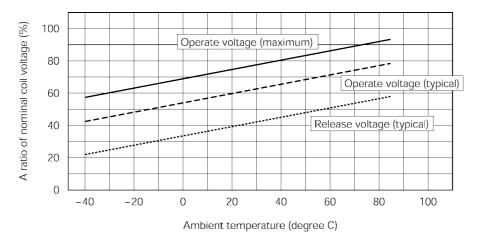


RUNNING TEST (Nonload)

(Load: None, Driving: 5V.DC, 50 Hz, 50% duty, Ambient temperature: Room temperature, Sample: UA2-5NU 20 pieces)

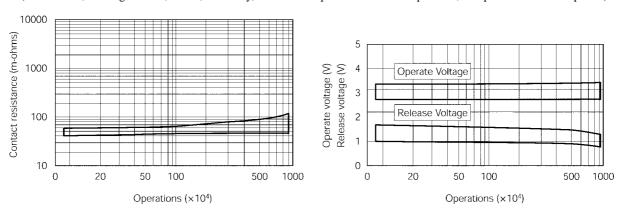

RUNNING TEST (Load)


(Load: 50 V.DC 0.1 A resistive, Driving: 5V.DC, 5 Hz, 50% duty, Ambient temperature: 85 degree C, Sample: UA2-5NU 10 pieces)

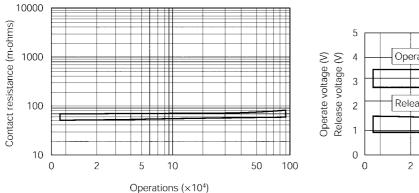





BREAKDOWN VOLTAGE


Sample: UA2-5NU 10 pieces

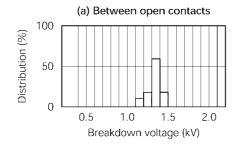


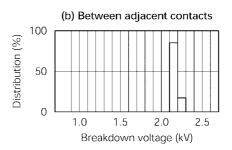


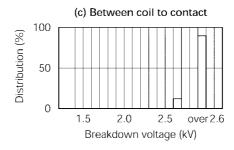



ALTERNATION OF VOLTAGE AT DENSELY MOUNTING (Magnet interference)

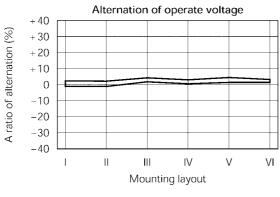


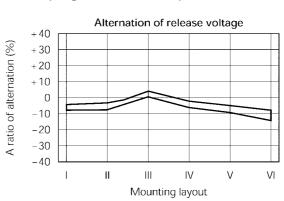













TUBE PACKAGE (UA2, UB2)


Dimensions of Package (Unit : mm)

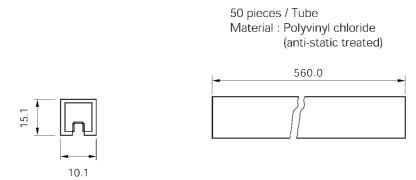


Outline of Package

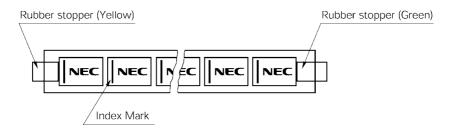

TAPE PACKAGE (UB2)

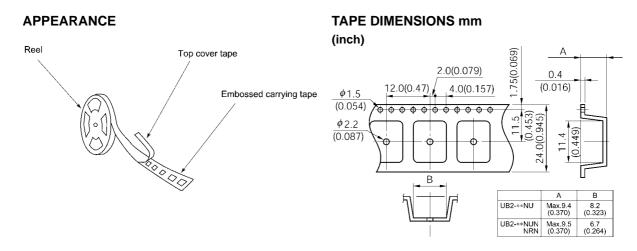

Relay orientation mark and tape carrying direction.

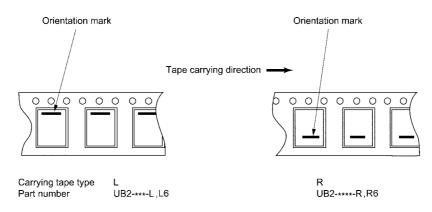



SOLDERING TEMPERATURE CONDITION

Through-hole mounting type (UA2)

Automatic soldering

* Preheating : 100°C max. 1 minute max.


* Solder temperature : 260°C max.
* Solder time : 5 seconds max.

Manual soldering

* Solder temperature : 350°C max. * Solder time : 3 seconds max.

Surface mounting type (UB2)

IRS Method

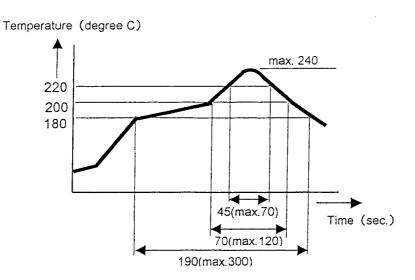

Note:


- 1. Temperature profile shows printed circuit board surface temperature on the relay terminal portion.
- 2. Check the actual soldering condition to use other method except above mentioned temperature profiles.

NOTES ON CORRECT USE

1. Notes on contact load

• Make sure that the contact load is within the specified range; otherwise, the lifetime of the contacts will be shortened considerably. Note that the running performance shown is an example, and that it varies depending on parameters such as the type of load, switching frequency, driver circuit, and ambient temperature under the actual operating conditions. Evaluate the performance by using the actual circuit before using the relay.

- If the internal connection diagram of a relay shows + and symbols on the coil, apply the rated voltage to the relay in the specified direction. If a rippled DC current source is used, abnormalities such as beat at the coil may occur.
- The maximum voltage that can be applied to the coil of the relay varies depending on the ambient temperature. Generally, the higher the voltage applied to the coil, the shorter the operating time. Note, however, that a high voltage also increases the bounce of the contacts and the contact opening and closing frequency, which may shorten the lifetime of the contacts.
- If the driving voltage waveform of the relay coil rises and falls gradually, the inherent performance of the relay may not be fully realized. Make sure that the voltage waveform instantaneously rises and falls as a pulse.

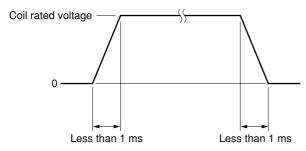


- For a latching relay, apply a voltage to the coil according to the polarity specified in the internal connection diagram of
- If a current is applied to the coil over a long period of time, the coil temperature rises, promoting generation of organic gas inside the relay, which may result in faulty contacts. In this case, use of a latching relay is recommended.

 • The operating time and release time indicate the time required
- for each contact to close after the voltage has been applied to or removed from the coil. However, because the relay has a mechanical structure, a bounce state exists at the end of the operating and release times. Furthermore, because additional time is required until the contact stabilizes after being in highresistance state, care must be taken when using the relay at high speeds.

3. Operating environment

- Make sure that the relay mounted in the application set is used within the specified temperature range. Use of a relay at a temperature outside this range may adversely affect insulation or contact performance.
- If the relay is used for a long period of time in highly humid (RH 85% or higher) environment, moisture may be absorbed into the relay. This moisture may react with the NOx and SOx generated by glow discharges that occur when the contacts are opened or closed, producing nitric or sulfuric acid. If this happens, the acid produced may corrode the metallic parts of the relay, causing operational malfunction.

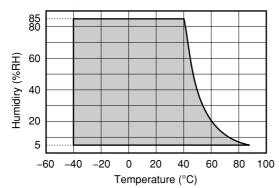

Permanent magnets are used in polarized relays. For this reason, when magnet, transformer, or speaker is located nearby, the relay characteristics may change and faulty operations may result.

- Because the operating temperature range varies depending on the humidity, use the relay in the temperature range illustrated in the figure below. Prevent the relay from being frozen and avoid the generation of condensation.
- The relay maintains constant sealability under normal atmospheric pressure (810 to 1,200 hpa). Its sealability may be degraded or the relay may be deformed and malfunction if it is used under barometric conditions exceeding the specified
- The same applies when the relay is stored or transported. Keep the upper-limit value of the temperature to which the relay is exposed after it is removed from the carton box to within 50°C.
- · If excessive vibration or shock is applied to the relay, it may malfunction and the contacts remain closed. Vibration or shock applied to the relay during operation may cause considerable damage to or wearing of the contacts. Note that operation of a snap switch mounted close to the relay or shock due to the operation of magnetic solenoid may also cause malfunctioning.

4. Notes on mounting relays

- When mounting a relay onto a PC board using an automatic chip mounter, if excessive force is applied to the cover of the relay when the relay is chucked or inserted, the cover may be damaged or the characteristics of the relay degraded. Keep the force applied to the relay to within 1 kg.
- Avoid bending the pins to temporarily secure the relay to the PC board. Bending the pins may degrade sealability or adversely affect the internal mechanism.
 It is recommended to solder the relay onto a PC board under
- the following conditions:
- <1> Reflow soldering
 - Refer to the recommended soldering temperature profile.
- <2> Flow soldering Solder temperature: 260°C max., Time: 5 seconds max., Preheating: 100°C max./1 minute max.

 <3> Manual soldering
 Solder temperature: 350°C, Time: 2 to 3 seconds
- · Ventilation immediately after soldering is recommended. Avoid immersing the relay in cleaning solvent immediately after soldering due to the danger of thermal shock being applied to the relay.
- Use an alcohol-based or water-based cleaning solvent. Never use thinner and benzene because they may damage the relay
- Do not use ultrasonic cleaning because the vibration energy generated by the ultrasonic waves may cause the contacts to remain closed.

5. Handling

- Relays are packaged in magazine cases for shipment. If a space is created in the case after some relays have been removed, be sure to insert a stopper to secure the remaining relays in the case. If relays are not well secured, vibration during
- transportation may cause malfunctioning of the contacts.

 Exercise care in handling the relay so as to avoid dropping it or allowing it to fall. Do not use a relay that has been dropped. If a relay drops from a workbench to the floor, a shock of 9,800 m/s² (1,000 G) or more is applied to the relay, possibly damaging its functions. Even if a light shock has been applied to the relay, thoroughly evaluate its operation before using it.
- Latching relays are factory-set to the reset state for shipment. A latching relay may be set, however, by vibration or shock applied while being transported. Be sure to forcibly reset the relay before using it in the application set. Also note that the relay may be set by unexpected vibration or shock when it is used in a portable set.
- The sealability of a surface-mount relay may be lost if the relay absorbs moisture and is then heated during soldering. When storing relays, therefore, observe the following points:
- <1> Please use relays within 12 months after delivery. (Storage conditions : 30 degrees C / 60% RH)
- <2> For MBB packing, Please use relays within 2 years after delivery. (Storage conditions : 30 degrees C / 60% RH) After opening MBB packing, Please use within 3 months. (Storage conditions : 30 degrees C / 60% RH)

No part of this document may be copied or reproduced in any form or by any means without the prior written consent of NEC/TOKIN Corporation. NEC/TOKIN Corporation assumes no responsibility for any errors which may appear in this document.

NEC/TOKIN Corporation does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from use of a device described herein or any other liability arising from use of such device. No license, either express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC/TOKIN Corporation or others. While NEC/TOKIN Corporation has been making continuous effort to enhance the reliability of its electronic components, the possibility of defects cannot be eliminated entirely. To minimize risks of damage or injury to persons or property arising from a defect in an NEC/TOKIN electronic component, customers must incorporate sufficient safety measures in its design, such as redundancy, fire-containment, and anti-failure features. NEC/TOKIN devices are classified into the following three quality grades:

"Standard", "Special", and "Specific". The Specific quality grade applies only to devices developed based on a customer designated "quality assurance program" for a specific application. The recommended applications of a device depend on its quality grade, as indicated below. Customers must check the quality grade of each device before using it in a particular application.

Standard: Computers, office equipment, communications equipment, test and measurement equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots

Special: Transportation equipment (automobiles, trains, ships, etc.), traffic control systems, anti-disaster systems, anti-crime systems, safety equipment and medical equipment (not specifically designed for life support)

Specific: Aircrafts, aerospace equipment, submersible repeaters, nuclear reactor control systems, life support systems or medical equipment for life support, etc.

The quality grade of NEC/TOKIN devices is "Standard" unless otherwise specified in NEC/TOKIN's Data Sheets or Data Books. If customers intend to use NEC/TOKIN devices for applications other than those specified for Standard quality grade, they should contact an NEC/TOKIN sales representative in advance.

(Note)

- (1) "NEC/TOKIN" as used in this statement means NEC/TOKIN Corporation and also includes its majorityowned subsidiaries.
- (2) "NEC/TOKIN electronic component products" means any electronic component product developed or manufactured by or for NEC/TOKIN (as defined above).

DE0202